 


NINJA®

BL660
OWNER'S GUIDE

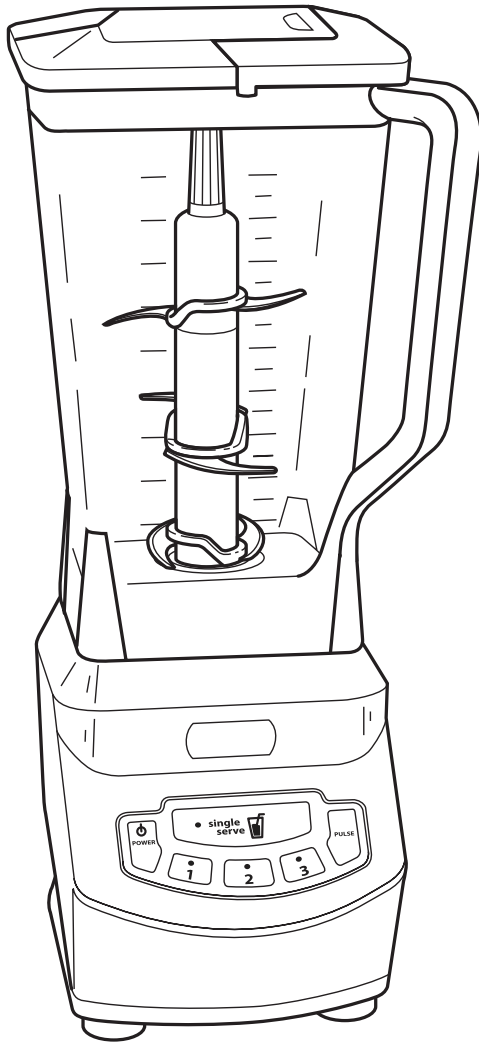

ninjakitchen.com
1 877 646-5288

IMPORTANT SAFETY INSTRUCTIONS

For Household Use Only

WHEN USING ELECTRICAL APPLIANCES, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED, INCLUDING THE FOLLOWING:

READ ALL INSTRUCTIONS BEFORE USING YOUR NINJA® PROFESSIONAL BLENDER WITH NUTRI NINJA® CUPS.

POLARIZED PLUG

⚠ WARNING: To reduce the risk of electric shock, this appliance has a polarized plug (one blade is wider than the other). This plug will fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet. **DO NOT modify the plug in any way.**

⚠ WARNING: Extension cords are not recommended for use with this product.

⚠ WARNING:
TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR INJURY:

- 1 ⚠ WARNING:** Remove utensils prior to processing. Failure to remove may cause the jar to be damaged or to shatter which may cause personal injury.
- 2 ⚠ WARNING:** Stacked Blade Assembly is sharp, not locked in place and removable, handle with care. When handling the Stacked Blade Assembly, always hold it by the shaft. Failure to do so will result in a risk of laceration.
- 3 ⚠ WARNING:** Stacked Blade Assembly is sharp and not locked in place. If using the pour spout, ensure the lid is fully locked onto the pitcher. If pouring with the lid removed, carefully remove the Stacked Blade Assembly first, holding it by the shaft. Failure to do so will result in a risk of laceration.
- 4 ⚠ CAUTION:** Do not blend hot liquids, doing so may cause excessive pressure build-up, resulting in risk of the user being burned.
- 5 ⚠ CAUTION:** We do not recommend grinding in any of our Nutri Ninja® cups.
- 6 ⚠ CAUTION:** Remove the Nutri Ninja Blade Assembly from the cup upon completion of blending. Some ingredients have the potential to expand after blending resulting in excessive pressure buildup that can pose a risk of injury.
- 7** To protect against electrical shock, do not submerge the appliance or allow the power cord to come into contact with water or any other liquid.

- 8 **DO NOT** allow the appliance to be used by children. Close attention is necessary when used near children. This is not a toy.
- 9 Never leave an appliance unattended when in use.
- 10 Appliance accessories are not intended to be used in the microwave as it may result in damage to the accessories.
- 11 Turn the appliance Off and remove the power cord from the electrical outlet when not in use, before assembling or disassembling parts and before cleaning. To unplug, grasp the plug and pull from the electrical outlet. Never pull from the power cord.
- 12 **DO NOT** abuse the power cord. Never carry the appliance by the power cord or yank it to disconnect from electrical outlet; instead grasp the plug and pull to disconnect.
- 13 **DO NOT** operate any appliance with a damaged cord or plug, or after the appliance malfunctions, has been dropped or damaged in any manner. This appliance has no serviceable parts. Return the appliance to SharkNinja Operating LLC for examination, repair or adjustment.
- 14 **DO NOT** let the power cord hang over the edge of table or counter or touch hot surfaces such as the stove.
- 15 Always use appliance on a dry, level surface.
- 16 Keep hands, hair, clothing, as well as utensils out of container while processing to reduce the risk of severe injury to persons or damage to the appliance. A scraper may be used but only when the appliance is not running.
- 17 Avoid contact with moving parts.
- 18 **DO NOT** attempt to sharpen blades.
- 19 **DO NOT** use the appliance if blade assemblies are bent or damaged.
- 20 To reduce risk of injury, never place the blade assemblies on the base without the pitcher or Nutri Ninja® cup properly attached.
- 21 **DO NOT** operate this appliance on or near any hot surfaces (such as gas or electric burner or in a heated oven).
- 22 The use of attachments or accessories including canning jars, not recommended by the manufacturer may result in fire, electric shock or personal injury.
- 23 **DO NOT** remove the container from the motor base while the appliance is in operation.
- 24 To reduce the risk of injury, **NEVER** operate the appliance without the lid in place; **DO NOT** try to defeat the interlock mechanism; make sure that the attachment is properly installed before operating the appliance.
- 25 **DO NOT** expose containers to extreme temperature changes.
- 26 **DO NOT** overfill.
- 27 **DO NOT** operate the appliance empty.
- 28 If the appliance overheats, a thermal switch will become activated and shut off the motor. To reset, unplug the appliance and let it cool down for approximately 15 minutes before using again.
- 29 **THIS PRODUCT IS INTENDED FOR HOUSEHOLD USE ONLY.** Do not use this appliance for anything other than its intended use. Do not use outdoors.
- 30 The maximum rating is based on the Stacked Blade Assembly (pitcher) that drives the greatest power and other recommended attachments may draw significantly less power or current.

SAVE THESE INSTRUCTIONS

THIS BOOK COVERS MODEL NUMBER:

BL660

TECHNICAL SPECIFICATIONS

Voltage:	120V., 60Hz.
Power:	1100 Watts
Pitcher Capacity:	72 oz (2.15 L, 9 cups)
MAX Liquid Capacity:	64 oz. (1.9 L, 8 cups)
Nutri Ninja® Cup Capacity:	16 oz (470 ml, 2 cups)





Contents

**Thank you for
purchasing
the Ninja®
Professional
Blender with
Nutri Ninja®
Cups.**

Getting to Know Your Ninja Professional Blender with Nutri Ninja Cups	5
Before First Use	7
Assembly & Use of the Pitcher	8
Assembly & Use of the Nutri Ninja® Cup	10
Care & Maintenance	11
Speed Chart	12
Troubleshooting Guide	12
Replacement Parts	12
Warranty & Registration	14

  Getting To Know Your Ninja® Professional Blender with Nutri Ninja® Cups

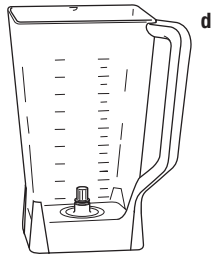

a Nutri Ninja® Cup (x2)

b To-Go Lids (x2)

c Nutri Ninja Blade Assembly

d Pitcher

e Pitcher Lid with Locking Handle

f Stacked Blade Assembly

g Motor Base

h Power Cord (not shown)

The Ninja® Professional Blender with Nutri Ninja® Cups is a high powered innovative tool with a compact design and outstanding performance. It is perfect for ice crushing, chopping, blending, and Nutrient and Vitamin Extraction*.



FEATURES:

- Ninja® Blade Technology
- 72 oz. Pitcher (MAX Liquid Capacity: 64 oz.) - BPA Free
- Nutri Ninja® Cups - BPA Free
- Cord Storage
- Lock-On Lid, Featuring Pour Spout
- Easy-to-Clean Electronic Control Panel

* Extract a drink containing vitamins and nutrients from fruits and vegetables

Before First Use

PLEASE KEEP THESE IMPORTANT SAFEGUARDS IN MIND WHEN USING THE APPLIANCE:

IMPORTANT: Make sure that the motor base is plugged in for use.

IMPORTANT: Never add ingredients into the container before placing the attachment in first.

 
IMPORTANT: Attachments are not interchangeable.

IMPORTANT: DO NOT attempt to operate the appliance without the lid on.


IMPORTANT: Never run the appliance empty.

IMPORTANT: Appliance accessories are not intended to be used in the microwave as it may result in damage to the accessories.

▲ WARNING: Stacked Blade Assembly is sharp and not locked in place. If using the pour spout, ensure the lid is fully locked onto the blender pitcher. Failure to do so will result in a risk of laceration.

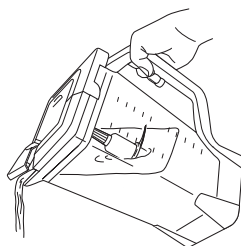

 ▲ WARNING: Stacked Blade Assembly is sharp and not locked in place. If pouring with the lid removed, carefully remove the Stacked Blade Assembly first, holding it by the shaft. Failure to do so will result in a risk of laceration.

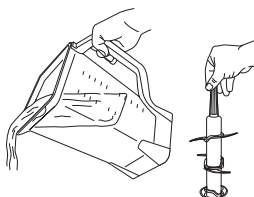

▲ CAUTION: Do not immerse the motor base into water or any other liquid.

- 1 Remove all packaging material and labels from the appliance. Separate/remove all parts from each other.
- 2 Wash the lids, pitcher, Nutri Ninja cups and blade assemblies in warm, soapy water. When washing the blade assemblies, use a dish-washing utensil with a handle to avoid direct hand contact with blades.

▲ WARNING: Handle the Stacked Blade Assembly and Nutri Ninja Blade Assembly with care when washing, as the blades are sharp.

- 3 Handle blade assemblies with care to avoid contact with sharp edges. Rinse and air dry thoroughly.
- 4 The pitcher, Nutri Ninja cups, lids, **Stacked Blade Assembly** and **Nutri Ninja Blade Assembly** are all dishwasher safe. It is recommended that the lids and blade assemblies be placed on the top rack. Ensure the blade assembly is removed from the cup or pitcher before placing in the dishwasher.
- 5 Wipe the motor base clean with a damp cloth.

Assembly & Use of the Pitcher

⚠ WARNING: Handle the Stacked Blade Assembly with care, as the blades are sharp.

⚠ WARNING: Remove utensils prior to processing. Failure to remove may cause the pitcher to be damaged or to shatter, which may cause personal injury.

⚠ WARNING: Never leave the appliance unattended while in use.

⚠ CAUTION: Do not blend hot liquids, doing so may cause excessive pressure buildup, resulting in risk of the user being burned.

IMPORTANT: Make sure that the motor base is plugged in for use.

ASSEMBLY

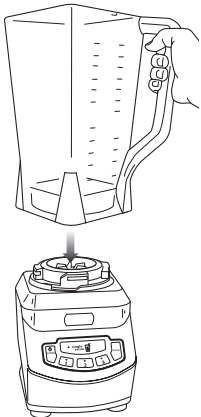 


Fig. 1



Fig. 2

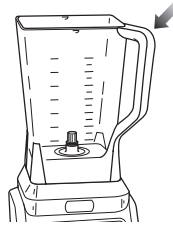 


Fig. 3a

OR

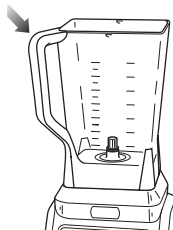 


Fig. 3b

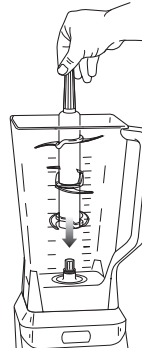 


Fig. 4

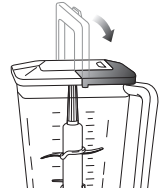 


Fig. 5



It's best to add the liquid ingredients first and then the dry ingredients.

- 1 Review warning and caution statements above before proceeding to number 2.
- 2 Place the motor base on a clean, dry, level surface such as a counter or table top.
- 3 Align and lower the pitcher onto the motor base. (Fig. 1) Handle should be aligned slightly to the right of the "LOCK" symbol on the motor base.
- 4 Rotate the blender pitcher clockwise until it clicks in place. As the pitcher rotates, it will lower and the safety tabs on the bottom of the pitcher will slide under the safety tabs on the top of the motor base. (Fig. 2)
- 5 The pitcher can be placed on the motor base two ways; the handle can be on the front right corner or the front left corner. (Fig. 3a, Fig. 3b)
- 6 Holding the Stacked Blade Assembly by the top of the shaft, place it onto the drive gear inside the pitcher. Ensure that the Stacked Blade Assembly is seated properly and is standing upright. (Fig. 4)
NOTE: The Stacked Blade Assembly will fit loosely on the drive gear.
- 7 Add the ingredients to the pitcher, making sure that they do not exceed the highest measured marking line on the side of the pitcher.
NOTE: If you need to add additional ingredients while the appliance is processing, open the pour spout cap and pour the ingredients in through the opening.
NOTE: When blending any kind of liquids, such as mixtures of any drinks or smoothies, do not exceed the "Max liquid" mark (64 oz.) on the pitcher.
- 8 Plug the power cord into the electrical outlet and press the power button (⏻).
IMPORTANT: As a safety feature, the power button (⏻) will flash and the motor will not work if the pitcher and lid are not installed correctly. When the pitcher and lid are installed properly, the power button (⏻) will be solid, indicating that the appliance is ready for use.
- 9 Holding the lid by the handle in the upright position, place it on top of the pitcher aligning the arrow (▼) located on the lid with the arrow (▲) located on the pitcher's handle. (Fig. 5)

Assembly & Use of the Pitcher - cont.

USE

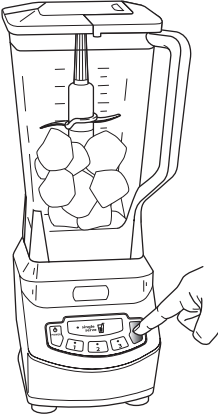 


Fig. 6

REMOVAL

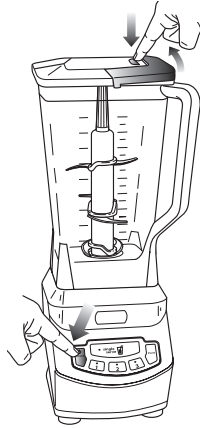 


Fig. 7

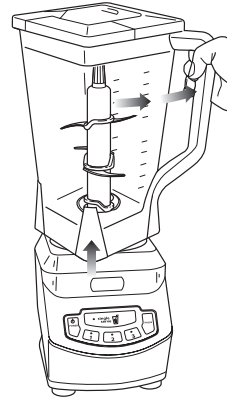 


Fig. 8

- 10** Select the speed that best suits your needs. **(Fig. 6)**

NOTE: Pulse ingredients for even chopping by pressing down in short intervals.

- 11** When you have reached your desired consistency, stop the appliance by pressing the power button (⏻) and wait for the Stacked Blade Assembly to stop turning. **(Fig. 7)**

- 12** To remove the lid, pull the lid handle up to a 90° angle. Turn the blender pitcher counter-clockwise to lift off the base. **(Fig. 7, Fig. 8)**

⚠ WARNING: Never insert your hands in the pitcher as the Stacked Blade Assembly is sharp. Always use a spatula to dislodge food that has stuck to the sides of the pitcher.

- 13** Open the pour spout cap and use the spout to empty liquid contents.

 
- 14** For thicker consistencies, first remove the lid by pressing the release button and pulling the lid handle up to a 90 degree angle to lift lid off the pitcher. Then, carefully remove the Stacked Blade Assembly by the top of the shaft. Place Stacked Blade Assembly away from the work area to avoid accidental contact. Finally, empty contents from the pitcher.

- 15** Make sure that the unit is unplugged when not in use.


Assembly & Use of the Nutri Ninja® Cup

- ⚠ **WARNING:** Handle the Nutri Ninja Blade Assembly with care, as the blades are sharp.
- ⚠ **WARNING:** Remove utensils prior to processing. Failure to remove may cause the Nutri Ninja cup to be damaged or to shatter, which may cause personal injury.
- ⚠ **WARNING:** Never leave the appliance unattended while in use.
- ⚠ **CAUTION:** Do not blend hot liquids, doing so may cause excessive pressure buildup, resulting in risk of the user being burned.
- ⚠ **CAUTION:** Remove the Nutri Ninja Blade Assembly from the cup upon completion of blending. Some ingredients have the potential to expand after blending resulting in excessive pressure buildup that can pose a risk of injury.


ASSEMBLY

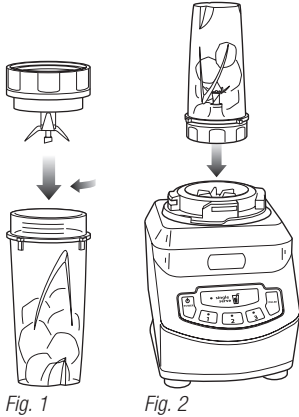

USE

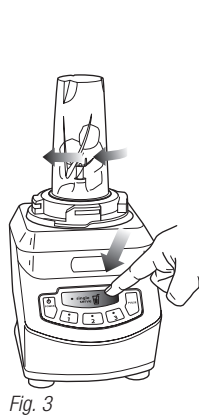 

REMOVAL

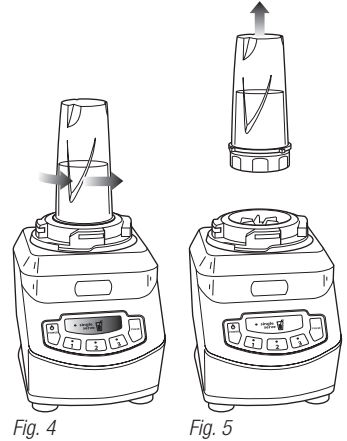 

💡 For best results, use short **"PULSES"**... Practice makes perfect!!

- 1 Review warning and caution statements above before proceeding to number 2.
- 2 Place the motor base on a clean, dry, level surface such as a counter or table top.
- 3 Add ingredients to the Nutri Ninja cup.
- 4 Place the Nutri Ninja Blade Assembly onto the cup and screw it tightly until you have a good seal. **(Fig. 1)**
- 5 Turn the Nutri Ninja cup upside down and place it onto the motor base, aligning the tabs on the cup with the motor base. Turn the Nutri Ninja cup clockwise to lock into place. You will hear a click when the lock is engaged. **(Fig. 2)**
- 6 Press down on the Single Serve button in short intervals to activate. **(Fig. 3)**
- 7 When you have reached your desired consistency, stop the appliance by removing your hand from the Single Serve button. To remove the Nutri Ninja cup turn it counter-clockwise **(Fig. 4)** and pull straight up to remove. **(Fig. 5)**
NOTE: Do not overfill! To avoid spilling, do not add ingredients past the "Max" fill line.
- 8 Turn the cup upright and remove the Nutri Ninja Blade Assembly by twisting the blade assembly to the left.
- 9 Place the To-Go lid onto the Nutri Ninja cup, twist to seal and enjoy!
- 10 Make sure that the motor base is unplugged when not in use.

 
Care & Maintenance

HOW TO CLEAN

- ⚠ CAUTION:** Make sure that the motor base is unplugged from the power source before inserting or removing any attachment and before cleaning.
 - ⚠ CAUTION:** DO NOT immerse the motor base into water or any other liquid.
- 1 Separate/remove all parts from each other.
 - 2 Hand Washing: Wash the lids, pitcher, Nutri Ninja® cups and blade assemblies in warm, soapy water. When washing the blade assemblies, use a dish-washing utensil with a handle to avoid direct hand contact with blades. Handle blade assemblies with care to avoid contact with sharp edges. Rinse and air dry thoroughly.
 - ⚠ WARNING:** Handle the Stacked Blade Assembly and Nutri Ninja Blade Assembly with care when washing, as the blades are sharp. Contact with the blades' edges can result in laceration.
 - 3 Dishwasher: The pitcher, Nutri Ninja cups, lids, Stacked Blade Assembly and Nutri Ninja Blade Assembly are all dishwasher safe. It is recommended that the lids and blade assemblies be placed on the top rack. Ensure the blade assembly is removed from the cup or pitcher before placing in the dishwasher.
 - 4 Wipe the motor base clean with a damp cloth.
- Please call customer service if any servicing needs to be performed on the appliance at 1-877-646-5288.

HOW TO STORE

- 1 Store the Ninja® Professional Blender upright with the pitcher on the motor base, Stacked Blade Assembly inside the pitcher and lid locked on the pitcher. Do not place anything on top. Store the Nutri Ninja Blade Assembly attached to the Nutri Ninja cup and the rest of the attachments along side the appliance or in a cabinet where they will not be damaged and won't cause a hazard. Insert the power cord into the cord storage area located in the back of the motor base.

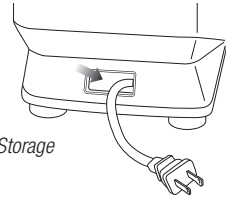


RESETTING THE MOTOR THERMOSTAT

The Ninja Professional Blender features a unique safety system which prevents damage to the unit's motor and drive system should you inadvertently overload your appliance.

If the appliance is being overloaded, the motor will stop. Allow the appliance to cool for approximately 15 minutes. To reset the appliance, follow the resetting procedure below:

- 1 Unplug the appliance from the electrical outlet.
- 2 Remove and empty the container and ensure that no food is jamming the blade assemblies.
- 3 Allow the appliance to cool for approximately 15 minutes.
- 4 Re-install the container onto the base and re-plug the appliance into the electrical outlet.
- 5 Proceed to use the appliance as before making sure not to exceed the recommended maximum capacities.

 
Speed Chart

BUTTON	FUNCTION	USE
POWER 	On/Off	Always turn appliance 'Off' when not in use.
1	Processing & Mixing	Use to mix thin batters, gravies and marinades, scramble eggs, puree cooked foods and uncooked fruits and chop vegetables for dips and salsa.
2	Blending	Use to grate hard cheeses, cream soups*, beat dips, grind nuts, thorough chopping, blend sauces* and spreads. Blend mixed drinks, powdered drinks or milk shakes.
3	Pureeing, Liquefying & Ice Crushing	Use to mix smoothies, frappes, liquefy thick mixtures and blend whole fruits and vegetables. Crush ice cubes for snow cones, chilled beverages or frozen slushes
PULSE	Controlled Processing & Bursts of Power	Use to control chopping and processing.

IMPORTANT: Do not run the appliance over 4 minutes at a time to prevent overheating of the appliance.

* When blending sauces and soups, make sure they're cooled to room temperature first - Ninja® containers are not intended for hot blending.

Troubleshooting Guide

PROBLEMS	POSSIBLE REASONS & SOLUTIONS
Control Panel Lights Are Blinking, Motor Doesn't Start or Blade Assembly Doesn't Rotate.	<p>Make sure the pitcher is securely placed on motor base.</p> <p>Make sure the lid is securely on pitcher in the correct position (align arrows).</p> <p>The blender is turned 'Off'. Press the power button () to turn 'On'.</p> <p>Check that the plug is securely inserted into the electrical outlet.</p> <p>Check the fuse or circuit breaker.</p> <p>The unit has overheated. Unplug and wait approximately 15 minutes before using again.</p>
Food is Unevenly Chopped.	<p>Either you are chopping too much food at one time, you are chopping food with different textures or the pieces are not of even size. Process smaller amounts per batch.</p>
Food is Chopped Too Fine or is Too Watery.	<p>The food has been over processed. Use pulse button for controlled processing.</p>
Food Collects on the Lid or on the Sides of the Pitcher.	<p>The mixture is too thick. Add more liquid.</p>
You Cannot Achieve Snow From Solid Ice.	<p>Do not use ice that has been sitting out or has started to melt. Use ice straight from the freezer.</p>

Replacement Parts

To order additional parts and accessories, please visit our website: ninjakitchen.com or feel free to contact customer service: **1-877-646-5288**.

ONE (1) YEAR LIMITED WARRANTY

SharkNinja Operating LLC warrants this product to be free from material defects and workmanship for a period of one (1) year from the date of purchase when utilized for normal household use, subject to the following conditions, exclusions and exceptions.

The liability of **SharkNinja Operating LLC** is limited solely to the cost of the repair or replacement of the unit at our option. This Limited Warranty does not cover normal wear of parts and does not apply to any unit that has been tampered with or used for commercial purposes. This Limited Warranty does not cover damage caused by misuse, abuse, negligent handling or damage due to faulty packaging or mishandling in transit. This Limited Warranty does not cover damage or defects caused by or resulting from damages from shipping or repairs, service or alteration to the product or any of its parts, which have been performed by a repair person not authorized by **SharkNinja Operating LLC**.

If your appliance fails to operate properly while in use under normal household conditions within the Limited Warranty period, you may return the complete appliance and accessories with proof of purchase and date, freight prepaid. For Customer Service support, call 1-877-646-5288 or visit our website ninjakitchen.com.

If the appliance is found by **SharkNinja Operating LLC** to be defective, in **SharkNinja Operating LLC's** sole discretion, we will repair or replace it free of charge. Proof of purchase date and a check made payable to **SharkNinja Operating LLC** in the amount of \$19.95 to cover the cost of return shipping and handling must be included.*

This Limited Warranty is extended to the original purchaser of the unit and excludes all other legal, implied and/or conventional warranties. The responsibility of **SharkNinja Operating LLC** if any, is limited to the specific obligations expressly assumed by it under the terms of this Limited Warranty. In no event is **SharkNinja Operating LLC** liable for incidental or consequential damages to anyone of any nature whatsoever. Some states do not permit the exclusion or limitation of incidental or consequential damages, so the above may not apply to you.

This Limited Warranty gives you specific legal rights, and you may also have other rights which vary from state to state or from province to province.

***IMPORTANT: Carefully pack item to avoid damage in shipping. Be sure to include proof of purchase date and to attach tag to item before packing with your name, complete address and phone number with a note giving purchase information, model number and what you believe is the problem with the item. We recommend you insure the package (as damage in shipping is not covered by your Limited Warranty). Mark the outside of your package "ATTENTION CUSTOMER SERVICE".**

PRODUCT REGISTRATION

Please visit ninjakitchen.com or call **1-877-646-5288** to register your new Ninja® product within ten (10) days of purchase. You will be asked to provide the store name, date of purchase and model number along with your name and address.

The registration will enable us to contact you in the unlikely event of a product safety notification. By registering you acknowledge to have read and understood the instructions for use, and warnings set forth in the accompanying instructions.

SharkNinja Operating LLC
US: Newton, MA 02459
CAN: Ville St-Laurent, QC H4S 1A7
1-877-646-5288
ninjakitchen.com

Ninja and Nutri Ninja are registered trademarks of SharkNinja Operating LLC.

Illustrations may differ from actual product. We are constantly striving to improve our products, therefore the specifications contained herein are subject to change without notice.

For SharkNinja U.S. Patent information visit sharkninja.com/USPatents

© 2015 SharkNinja Operating LLC
BL660_30_IB_151102_3
PRINTED IN CHINA